

FILTERS

CATALOGUE

DÖRR

DHG FILTERS _____ 03

UV FILTERS & POLARIZING FILTERS 04

NEUTRAL DENSITY FILTERS 06

SPECIAL EFFECT FILTERS 08

ACHROMATIC CLOSE-UP LENS 09

DIGILINE FILTERS _____ 10

UV FILTERS & POLARIZING FILTERS 10

NEUTRAL DENSITY FILTERS 11

MACRO KIT _____ 12

GRADUATED COLOUR FILTERS ____ 14

G02 SQUARE FILTER SYSTEM ____ 16

ACCESSORIES _____ 19



Find product videos on Youtube
DÖRR TV Channel
youtube.com/user/DOERRTV

1. Subject to change

2. Retail prices (MSRP) include 19% VAT

3. Printed colours may differ slightly from the actual colours



WITH FILTER



W/O FILTER

DHG FILTERS

Light incidence on a glass surface causes a loss of app. 5% of the light by reflections; contrast brilliance and sharpness are reduced. In order to avoid dull images, the filter surfaces are treated with a metal oxide layer, also known as "coating". High quality filters boast of a number of coating layers = Multi Coating. As an effect, reflections are almost eliminated. High-end quality filters come with an additional Nano coating to make them liquid and dirt repellent. They are easier to clean more robust than other filters

DHG

Quality Features of DÖRR DHG Filters

- DHG stands for **Digital High Grade**
- **DHG Multi Coating** on both sides ensures 99,5 % light transmission and avoids reflections, loss of sharpness, contrast and brilliance.
Number of coating layers for DHG filters are: 10 layers, Super DHG filters: 12 layers.
- Ultra slim frame avoids vignetting when taking wide-angle pictures
- Black coated metal frame and black glass edges reduce reflections inside the filters



WITH FILTER

W/O FILTER

DHG UV FILTER

DHG UV filters protect the front lens from humidity, dust and scratches. They are totally colour neutral and do not cause any loss of light. Therefore, they can smoothly stay on the lens.

- DHG 10x Multi Coating on both sides ensures 99,5% light transmission
- Ultra slim frame avoids vignetting
- Black coated metal frame and black glass edges reduce reflections
- Front filter thread



DHG



ø in mm	Item No	GTIN13	MSRP €
37	316037	4000461035852	32,90
39	316039	4000461086472	32,90
40,5	316040	4000461050541	32,90
43	316043	4000461035869	32,90
46	316046	4000461035593	32,90
49	316049	4000461035609	32,90
52	316052	4000461035616	36,00
55	316055	4000461035623	36,00
58	316058	4000461035630	39,90
62	316062	4000461035647	42,90
67	316067	4000461035654	48,00
72	316072	4000461035661	52,00
77	316077	4000461035678	59,00
82	316082	4000461035685	69,00
86	316086	4000461077289	99,00
95	316095	4000461077142	119,00
105	316105	4000461080654	189,00

DHG CIRCULAR POLARIZING FILTER

Eliminates reflections on non-metallic surfaces e.g. windows or water surfaces, by simply rotating the filter. For improved colour saturation and rich contrasts.

- DHG 10x Multi Coating on both sides ensures 99,5% light transmission
- Ultra slim frame avoids vignetting
- Black coated metal frame and black glass edges reduce reflections
- Front filter thread



DHG



ø in mm	Item No	GTIN13	MSRP €
37	316137	4000461035876	79,90
40,5	316140	4000461050558	79,90
43	316143	4000461035883	79,90
46	316146	4000461035692	79,90
49	316149	4000461035708	79,90
52	316152	4000461035715	86,00
55	316155	4000461035722	89,00
58	316158	4000461035739	95,00
62	316162	4000461035746	105,00
67	316167	4000461035753	114,00
72	316172	4000461035760	129,00
77	316177	4000461035777	139,00
82	316182	4000461035784	159,00
86	316186	4000461077296	179,00
95	316195	4000461077159	229,00
105	316205	4000461080661	259,00

DHG SUPER PROTECT UV FILTER

Tops the DHG UV filter **with an additional Nano coating** that makes the filter surface scratchproof as well as water and oil repellent.

- DHG 12x Multi Coating on both sides ensures 99,5% light transmission
- "Super" stands for additional Nano coating
- Ultra slim frame avoids vignetting
- Black coated metal frame and black glass edges reduce reflections
- Front filter thread

MADE IN JAPAN



DHG



ø in mm	Item No	GTIN13	MSRP €
52	316652	4000461039850	44,00
55	316655	4000461039867	46,00
58	316658	4000461039874	53,00
62	316662	4000461039881	62,00
67	316667	4000461039898	72,00
72	316672	4000461039904	79,00
77	316677	4000461039911	88,00
82	316682	4000461039928	99,00
86	316686	4000461077586	109,00
95	316695	4000461077593	129,00
105	316705	4000461080678	209,00

DHG SUPER CIRCULAR POLARIZING FILTER

Tops the DHG Circular Polarizing filter **with an additional Nano coating** that makes the filter surface scratchproof as well as water and oil repellent.

- DHG 12x Multi Coating on both sides ensures 99,5% light transmission
- "Super" stands for additional Nano coating
- Ultra slim frame avoids vignetting
- Black coated metal frame and black glass edges reduce reflections
- Front filter thread

MADE IN JAPAN



DHG



ø in mm	Item No	GTIN13	MSRP €
52	316752	4000461039935	99,00
55	316755	4000461039942	109,00
58	316758	4000461039959	115,00
62	316762	4000461039966	119,00
67	316767	4000461039973	129,00
72	316772	4000461039980	139,00
77	316777	4000461039997	149,00
82	316782	4000461040009	179,00
86	316786	4000461077609	195,00
95	316795	4000461077616	245,00
105	316805	4000461080685	299,00

DHG ND8 NEUTRAL DENSITY FILTER

The DHG ND8 neutral density filter **extends the exposure time by factor 8**, which corresponds to 3 aperture stops (f-stops).

Example: the surrounding light conditions allow an f-stop of f8.0, it can change to f2.8 using the DHG ND8 filter – so you can reduce the focus range for more creative shots.

- Colour neutral due to neutral density
- Perfectly protects the lens of your digital camera
- Optimizes contrast results of your digital camera
- Non-reflective ultra slim frame avoids vignetting
- DHG Multi Coating on both sides

MADE IN JAPAN



DHG



ø in mm	Item No	GTIN13	MSRP €
37	316437	4000461044779	45,00
40,5	316440	4000461077715	45,00
43	316443	4000461044786	45,00
46	316446	4000461044793	45,00
49	316449	4000461044809	45,00
52	316452	4000461044816	45,00
55	316455	4000461044823	45,00
58	316458	4000461044830	55,00
62	316462	4000461044847	55,00
67	316467	4000461044854	68,00
72	316472	4000461044861	69,00
77	316477	4000461044878	79,00
82	316482	4000461044885	89,00

DHG ND32 NEUTRAL DENSITY FILTER

The DHG ND32 **extends the exposure time by a factor of 32** and thus allows to extend the exposure e.g. from 1/1000 s to 1/30 s. This corresponds to 5 aperture stops, e.g. from f16 to f2.8. So you can reduce the focus range or you get a dynamical motion blur with strong ambient light.

- Colour neutral due to neutral density
- Perfectly protects the lens of your digital camera
- Optimizes contrast results of your digital camera
- Non-reflective ultra slim frame avoids vignetting
- DHG Multi Coating on both sides

MADE IN JAPAN



DHG



ø in mm	Item No	GTIN13	MSRP €
37	317137	4000461080692	49,00
40,5	317140	4000461080708	49,00
43	317143	4000461080715	49,00
46	317146	4000461080722	49,00
49	317149	4000461080739	49,00
52	317152	4000461080746	49,00
55	317155	4000461080753	49,00
58	317158	4000461080760	59,00
62	317162	4000461080777	59,00
67	317167	4000461080784	79,00
72	317172	4000461080791	79,00
77	317177	4000461080807	89,00
82	317182	4000461080814	99,00



DHG ND2.5 - ND500 VARIABLE ND FILTER

The DHG Vario-ND2,5 - 500 variable neutral density filter shades the image even and colour neutrally. By turning the filter, the shade intensity is infinitely variable. Exposure time can be expanded variable. Exposure time can be expanded from 2,5x to 500x corresponding to 1,3 to 9 aperture stops. The DHG neutral density filters ensures optimum contrast and brilliant images granted by the DHG coating on both sides. The slim filter frame avoids vignetting when using wide-angle lenses.

- Colour neutral due to neutral density
- Optimizes contrast results of your digital camera
- Reduces the depth of field without overexposure
- Non-reflective ultra slim frame avoids vignetting
- DHG Multi Coating on both sides

MADE IN JAPAN



DHG



VARIABLE DENSITY FILTERS

There are situations in which a photographer desires a longer exposure time, e.g. to create pictures of the sea or floating water or to eliminate people on vivid square. The aperture settings can come to its limit sometimes. No matter if in a studio or outdoors – too much light does not allow a portrait shot with reduced depth of field. A variable neutral density filter shades the image even and colour neutrally. By turning the filter, the shade intensity is infinitely variable. Exposure time can be expanded variably.

ø in mm	Item No	GTIN13	MSRP €
58	317258	4000461083914	159,00
67	317267	4000461083921	199,00
77	317277	4000461083938	229,00
82	317282	4000461083945	249,00



DHG SOFT FANTASY FILTER

Soft Fantasy filters can produce dreamy portraits, wedding pictures, or landscape pictures full of atmosphere. They produce a slight soft-focus effect over the full image.

- Soft filter for definite sharpness all over the image
- DHG Multi Coating
- Ultra slim frame avoids vignetting
- Black coated metal frame reduces reflections
- Including adapter rings (see chart)



ø in mm	Item No	GTIN13	MSRP €
55	316855	4000461045042	44,90
with adapter rings for 49 and 52 mm			
67	316867	4000461045059	54,90
with adapter rings for 58 und 62 mm			
77	316877	4000461045066	64,90
with adapter rings for 72 mm			

DHG ACHROMATIC CLOSE-UP LENS 5 DPT

The achromatic close-up lens is much cheaper than a macro lens but achieves astonishing results! When it comes to take macro shots, the achromatic close-up lens is mounted onto the filter mount of the lens at ease. Supplied with adapter rings in various sizes – for details see chart.

- Outstanding image quality without colour fringes are provided by the achromatic optics, no loss of light
- Focus distance reduction with 5 dioptries app. 1/5
- Great for digital and traditional cameras as well as camcorders
- Optical construction: 2 elements in 1 group
- DHG Multi Coating
- Black aluminium lens frame

MADE IN JAPAN




DHG



ø in mm	Item No	GTIN13	MSRP €
55	316555	4000461036545	109,00
with adapter rings for 49 and 52 mm			
67	316567	4000461036538	159,00
with adapter rings for 58 und 62 mm			
77	316577	4000461037054	199,00
with adapter rings for 72 mm			



WITH CLOSE-UP LENS

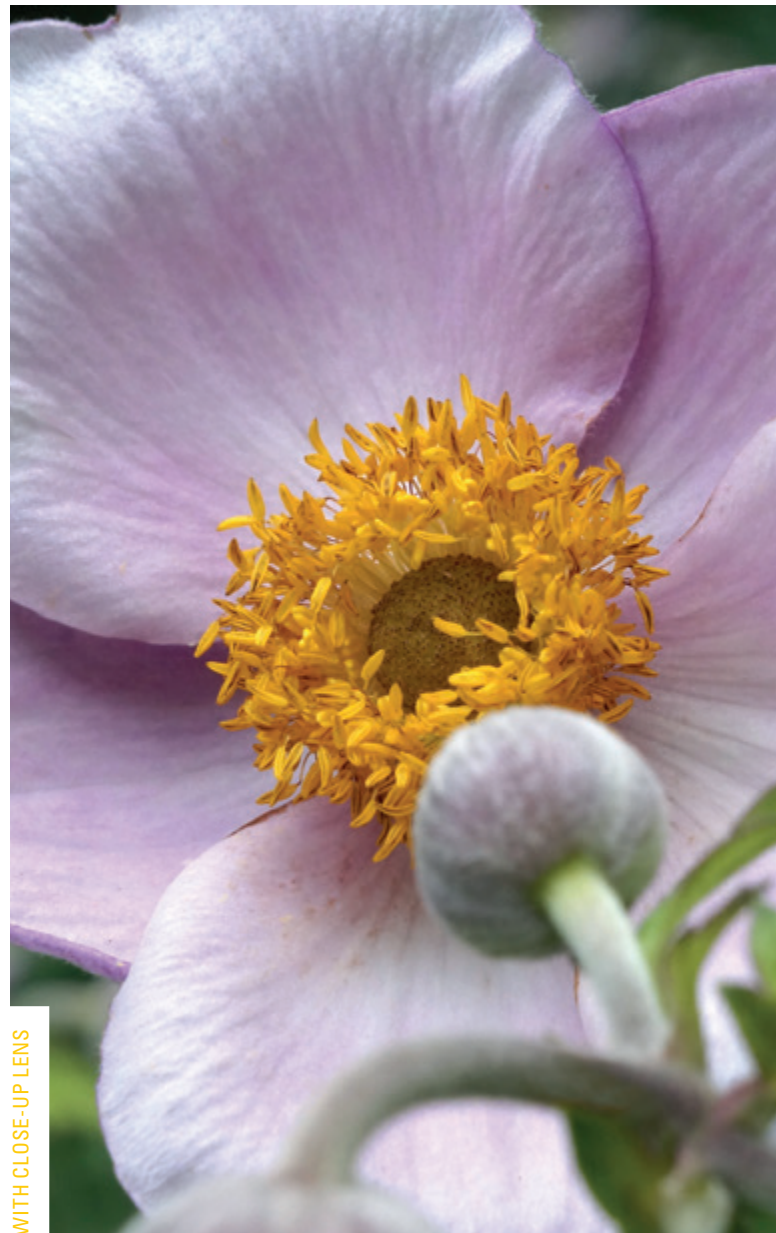

WITH CLOSE-UP LENS



DIGILINE UV PROTECT FILTER

Entry-level Slim Line UV protect filter with high definition.

- Optimum protection for your digital camera lens
- Slim line frame avoids vignetting
- Non-reflective metal frame
- Front filter thread for extra accessories



ø in mm	Item No	GTIN13	MSRP €
37	310137	4000461051814	19,90
39	310139	4000461086335	19,90
40,5	310140	4000461051821	19,90
43	310143	4000461051838	19,90
46	310146	4000461051845	19,90
49	310149	4000461051852	19,90
52	310152	4000461043390	19,90
55	310155	4000461043406	19,90
58	310158	4000461043413	22,00
62	310162	4000461043420	22,00
67	310167	4000461043437	25,00
72	310172	4000461043444	25,00
77	310177	4000461043451	29,90
82	310182	4000461051869	36,90
86	310186	4000461065866	39,90

DIGILINE CIRCULAR POLARIZING FILTER

Entry-level circular polarizer with high definition. The slim line frame avoids vignetting.

- Optimum protection for your digital camera lens
- Enhances contrasts and colour saturation
- Eliminates reflections on non-metallic surfaces
- Non-reflective metal frame



ø in mm	Item No	GTIN13	MSRP €
37	310237	4000461051876	39,00
39	310239	4000461086342	39,00
40,5	310240	4000461051883	39,00
43	310243	4000461051890	39,00
46	310246	4000461051906	39,00
49	310249	4000461051913	39,00
52	310252	4000461043468	39,00
55	310255	4000461043475	39,00
58	310258	4000461043482	42,00
62	310262	4000461043499	42,00
67	310267	4000461043505	59,00
72	310272	4000461043512	59,00
77	310277	4000461043529	79,00
82	310282	4000461051920	85,00
86	310286	4000461066306	89,00

DIGILINE NEUTRAL DENSITY FILTER ND3.0 1000x

The ND3.0 1000x filter **extends the exposure time by factor 1000**, which corresponds, to 10 f-stops. Example: an exposure time of 1/1000 s can change to 1s using the ND3.0 1000x neutral density filter. As an effect of longer exposure time, you can for example "eliminate" people moving on squares or landscapes.

- Optimum contrasts and brilliance even with more open aperture
- Reduces the depth of field without overexposure
- Reduces the amount of light by 10 f-stops
- Extends the available exposure time by a factor of 1000x
- Slim filter frame – avoids vignetting as of a focal length of 18 mm (APS-C) or 28 mm (35 mm)
- Black coated metal frame reduces reflections



ø in mm	Item No	GTIN13	MSRP €
37	318037	4000461063404	22,90
40,5	318040	4000461063411	22,90
46	318046	4000461063428	22,90
49	318049	4000461063435	22,90
52	318052	4000461063442	24,90
55	318055	4000461063459	27,90
58	318058	4000461063466	29,90
62	318062	4000461063473	36,90
67	318067	4000461063480	39,90
72	318072	4000461063497	49,90
77	318077	4000461063503	54,90
82	318082	4000461063510	59,90

DIGILINE VARIABLE ND FILTER ND4 - 400

Best solution for photographers who wish to react flexibly on light conditions. The ND4 - 400 **increases exposure time variably by the factor 4 up to 400x** which corresponds to 1 to 8 f-stops. So you can master any light situation no matter if it is landscape, portrait, studio and outdoor photography. Supplied with Nylon soft case, lens cap and adapter rings for various sizes.

- Variable light reduction by 1 to 8 aperture stops
- Optimum contrasts brilliance even with more open aperture
- Reduces the depth of field without overexposure
- Slim filter frame avoids vignetting as of focal length of 18 mm (APS-C) or 28 mm (35 mm)
- Black coated metal frame reduces reflections
- Including adapter rings (see chart)



ø in mm	Item No	GTIN13	MSRP €
37	310337	4000461063343	49,90
49	310349	4000461063350	59,90
with adapter rings for 40,5 and 46 mm			
58	310358	4000461062896	67,90
with adapter rings for 52 and 55 mm			
67	310367	4000461062919	75,90
with adapter ring for 62 mm			
77	310377	4000461062933	85,90
with adapter ring for 72 mm			
82	310382	4000461086540	99,90



MACRO KIT (+1, +2, +4 DPT)

Inexpensive solution to expand your camera lens for close-up shots. The close-up lens is screwed into the filter thread of your lens, whereby up to 2 close-up lenses can be combined (max. 6 dioptres). Now you get closer to your object. The larger the focal length, the more effective the close-up lens will be. Using 50 mm focal length in use a ratio of approx. 1:2 is achievable. For optimum results, close the camera aperture by 2 to 3 stops.

- Kit includes 3 close-up lenses with 1, 2 and 4 dioptres
- To be screwed into the filter thread of lens
- Metal frame
- Comes with front thread for additional lens or lens hood
- All camera program modes can be used
- Supplied with protective case



ø in mm	Item No	GTIN13	MSRP €
43	368043	4000461055010	39,90
46	368046	4000461055027	39,90
49	368049	4000461062537	39,90
52	368052	4000461031472	39,90
55	368055	4000461031489	39,90
58	368058	4000461031496	39,90
62	368062	4000461031502	59,90
67	368067	4000461031519	59,90
72	368072	4000461037122	69,90



A partial shade and an atmospheric ambience can be achieved by combining a **graduated ND filter** with a **graduated colour filter**.



Polarizing filters reduce reflections on water surfaces, windows, car varnish and more. They enhance the colour saturation and provide rich contrasts.



GRADUATED COLOUR FILTERS

These filters create harmonic light sceneries with balanced exposure. Rotating frame allows a flexible use of the graduated effect. Ideal for photography and video filming. Front filter mount for additional accessories.

i Graduated ND Filter

Often the sky on pictures is too bright. Exposure time should be shorter for the sky than for the main object. Using a grey coloured graduated filter, you can achieve correct exposure all over the image with enhanced clouds.



GREY

BLUE



ORANGE

TOBACCO

i Graduated Colour Filter

A boring sky can spoil the picture result. A graduated colour filter gets more excitement to the picture. The sky scenery can change from romantic to threatening.



GRADUATED COLOUR FILTERS GREY

Colour neutral, for more balanced exposure when brightness varies.



ø in mm	Item No	GTIN13	MSRP €
37	318137	4000461063527	24,90
40,5	318140	4000461063534	24,90
46	318146	4000461063541	24,90
49	318149	4000461063558	24,90
52	318152	4000461063565	27,90
55	318155	4000461063572	29,90
58	318158	4000461063589	34,90
62	318162	4000461063596	39,90
67	318167	4000461063602	44,90
72	318172	4000461063619	49,90
77	318177	4000461063626	54,90
82	318182	4000461063633	59,90

GRADUATED COLOUR FILTERS BLUE

Enhances colours for special effects or a deep blue sky.



ø in mm	Item No	GTIN13	MSRP €
37	318237	4000461063640	24,90
40,5	318240	4000461063657	24,90
46	318246	4000461063664	24,90
49	318249	4000461063671	24,90
52	318252	4000461063688	27,90
55	318255	4000461063695	29,90
58	318258	4000461063701	34,90
62	318262	4000461063718	39,90
67	318267	4000461063725	44,90
72	318272	4000461063732	49,90
77	318277	4000461063749	54,90
82	318282	4000461063756	59,90

GRADUATED COLOUR FILTERS ORANGE

Enhances colours and creates impressive sunsets or sets thundery clouds into dramatic scenery.



ø in mm	Item No	GTIN13	MSRP €
37	318337	4000461063763	24,90
40,5	318340	4000461063770	24,90
46	318346	4000461063787	24,90
49	318349	4000461063794	24,90
52	318352	4000461063800	27,90
55	318355	4000461063817	29,90
58	318358	4000461063824	34,90
62	318362	4000461063831	39,90
67	318367	4000461063848	44,90
72	318372	4000461063855	49,90
77	318377	4000461063862	54,90
82	318382	4000461063879	59,90

GRADUATED COLOUR FILTERS TOBACCO

Enhances colours and warm earth or creates a dramatic sky scenery.



ø in mm	Item No	GTIN13	MSRP €
37	318437	4000461063886	24,90
40,5	318440	4000461063893	24,90
46	318446	4000461063909	24,90
49	318449	4000461063916	24,90
52	318452	4000461063923	27,90
55	318455	4000461063930	29,90
58	318458	4000461063947	34,90
62	318462	4000461063954	39,90
67	318467	4000461063961	44,90
72	318472	4000461063978	49,90
77	318477	4000461063985	54,90
82	318482	4000461063992	59,90

GO2 SQUARE FILTER SYSTEM

Those who frequently use filters will love the Go2 Filter System. With a simple Go2 system adapter the filter holder mounts to the lens. Now up to three Go2 square filters can slide simultaneously into the filter holder. Using graduated filters, it is upon the user's creativity to slide the filters up and down, to use them upside down or to combine various filters. The additionally mounted Go2 System Lens Hood avoids disturbing reflections. Square filter size: 8,3 x 9,4 cm

i Each Go2 Filter is packed in a sturdy plastic box

GO2 FILTER HOLDER

The center component of the Go2 filter system! It attaches easily to the lens in combination with a Go2 adapter ring. Then the desired filters can be inserted (up to 3 filters).



Item No	GTIN13	MSRP €
318900	4000461071676	11,90

GO2 METAL ADAPTER RING

They combine with the Go2 filter holder and are available for lens sizes 37 mm up to 82 mm.



ø in mm	Item No	GTIN13	MSRP €
37	318937	4000461083235	7,90
40,5	318940	4000461083242	7,90
46	318946	4000461083259	7,90
49	318949	4000461071836	7,90
52	318952	4000461071843	7,90
55	318955	4000461071850	7,90
58	318958	4000461071867	7,90
62	318962	4000461071874	7,90
67	318967	4000461071881	7,90
72	318972	4000461071898	7,90
77	318977	4000461071904	7,90
82	318982	4000461071911	7,90

GO2 LENS HOOD

The lens hood avoids reflections and lateral stray light. The hood is simply plugged onto the filter holder. No need to remove it when exchanging filters.



Item No	GTIN13	MSRP €
318901	4000461071683	8,90

GO2 ND8 NEUTRAL DENSITY FILTER

Neutral Density (ND) Filters shade the picture equally and colour neutrally. So the exposure time can be extended and a larger aperture opening gets available.



Item No	GTIN13	MSRP €
318905	4000461071690	21,90

GO2 BLACK & WHITE COLOUR FILTERS

Colour filter for creative Black & White Photography. To combine with the Go2 filter holder.



Colour	Item No	GTIN13	MSRP €
Red	318920	4000461071782	21,90
Yellow	318921	4000461071799	21,90
Blue	318922	4000461071805	21,90
Green	318923	4000461071812	21,90
Orange	318924	4000461071829	21,90

GO2 GRADUATED COLOUR FILTERS

A graduated colour filter gets more excitement to the picture. To combine with the Go2 filter holder.



Colour	Item No	GTIN13	MSRP €
Rot	318910	4000461071713	21,90
Gelb	318911	4000461071720	21,90
Blau	318912	4000461071737	21,90
Grün	318913	4000461071744	21,90
Orange	318914	4000461071751	21,90
Grau	318915	4000461071768	21,90
Tobacco	318916	4000461071775	21,90

GO2 CIRCULAR POLARIZING FILTER

The polarizing filters avoids reflections on non-metallic surfaces and enhances contrasts and colour saturation. The filter is slid into the filter holder and can be rotated when needed.



Item No	GTIN13	MSRP €
318906	4000461071706	23,90



GRADUATED RED



GRADUATED YELLOW



GRADUATED BLUE



GRADUATED GREEN



GRADUATED ORANGE



GRADUATED GREY



GRADUATED TOBACCO



W/O FILTER

- Creates impressive sunsets even when the sky looks unimposing
- Creates harmonic light sceneries in landscapes with predominant sky
- Enhances colours for special effects or a deep blue sky
- Turns green colours in nature more shading. Ideal for landscapes with water
- Creates impressive sunsets or sets thundery clouds into dramatic scenery
- Colour neutral, for a more balanced exposure when brightness varies
- Enhances warm earth tones or for dramatic sky scenery



GO2 FILTER SYSTEM KIT



Kit components – 1 each	Item No	MSRP €
Go2 Filter Holder	318900	11,90
Go2 Lens Hood	318901	8,90
Go2 ND8 Neutral Density Filter	318905	21,90
Go2 CPL Polarizing Filter	318906	23,90
Go2 Graduated Colour Filter Red	318910	21,90
Go2 Graduated Colour Filter Yellow	318911	21,90
Go2 Graduated Colour Filter Blue	318912	21,90
Go2 Graduated Colour Filter Green	318913	21,90
Go2 Graduated Colour Filter Orange	318914	21,90
Go2 Graduated Colour Filter Grey	318915	21,90
Go2 Graduated Colour Filter Tobacco	318916	21,90

GO2 GRADUATED COLOUR FILTERS EXAMPLES OF USE

Item No	GTIN13	MSRP €
318990	4000461083556	219,90

i Please choose a suitable adapter ring for your lens, they are available from 37 to 82 mm > see page 16 **Go2 Metal Adapter Rings**



ROT



GELB



BLAU



GRÜN



ORANGE



W/O FILTER

GO2 BLACK & WHITE FILTERS EXAMPLES OF USE

Blue (sky) gets visibly darker. Creates a high contrast of clouds in the sky, haze is toned down considerably, red gets lighter, skin tones get paler. Great for dramatic landscapes

Blue (sky) gets darker, reduces haze slightly, clouds show rich contrasts, red and green colour become lighter. Ideal for landscape photography

Red gets darker, blue lighter. Reinforces the haze, reduces the contrast, produces diffuse and hazy atmosphere

Red and blue gets darker, green gets lighter and more shading (nature). Creates a beautiful skin for portraits

Effects are in between yellow and red, less alienation then with red filter



GO2 FILTER SYSTEM KIT BLACK & WHITE



Kit components – 1 each	Item No	MSRP €
Go2 Filter Holder	318900	11,90
Go2 Lens Hood	318901	8,90
Go2 Black & White Filter Red	318920	21,90
Go2 Black & White Filter Yellow	318921	21,90
Go2 Black & White Filter Blue	318922	21,90
Go2 Black & White Filter Green	318923	21,90
Go2 Black & White Filter Orange	318924	21,90

Item No	GTIN13	MSRP €
318991	4000461083907	130,30

i Please choose a suitable adapter ring for your lens, they are available from 37 to 82 mm > see page 16 **Go2 Metal Adapter Rings**

FILTER CASES FOR ROUND FILTERS

Useful and convenient plastic box for storage and transportation of filters. Closes safely, yet opens easily when in use.

- Small – for filter ø 37 to 58 mm
- Large – for filter ø 62 to 86 mm



	Item No	GTIN13	MSRP €
Small	316690	4000461077692	2,69
Large	316691	4000461077708	2,99

PLASTIC STORAGE BOX FOR GO & GO2 FILTER SYSTEM

Practical and handy for safe storage and transportation of square filters. Suitable for filters of the Go & Go2 filter systems and other square filters up to a size of 80 x 94 mm.



Item No	GTIN13	MSRP €
372386	4000461072000	5,90

ACTION BLACK CASE FILTER CASE

Black Nylon filter case with four compartments for filters and other accessories.

- Compartments hold filters up to ø 82 mm
- Exterior measurements: approx. 10,5 x 1,5 x 21 cm



Item No	GTIN13	MSRP €
320040	4000461043055	9,90

ADVENTURE CASE FILTER CASE

Black filter case made of high quality Nylon. Comes with four compartments for filters and other accessories, e.g. memory cards.

- Filters are well-protected in the elastic interior pockets by Velcro® lids
- Offers room for filters up to ø 82 mm



Item No	GTIN13	MSRP €
320050	4000461039560	16,90

DÖRR GmbH

Messerschmittstr. 1 D-89231 Neu-Ulm
Fon: +49 731 97037-0 Fax: +49 731 97037-37
info@doerrfoto.de doerrfoto.de
fb.com/doerrgmbh